








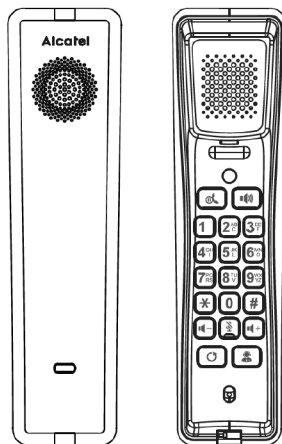


# Alcatel

## Temporis IP12




### QUICK START GUIDE

-  Status indicator
-  Redial
-  Programmable key
-  Call Hold / Resume
-  Handsfree mode
-  Ringing: mute ringer
-  In conversation: mute / unmute microphone
-  Idle mode / ringing: ringervolumen control
-  In conversation: speaker / earpiece volumen control

### Phone web interface

- To find out your phone's IP address long** press # key; the IP address will be read out
- Open a web browser on your computer.  
Enter <http://> and the IP address in the address bar and validate.
- Default login and password are  
« admin/admin » for administrator.
- Minimum required configuration is one sip** account. Check administrator guide for details.


### Making a call

Direct dialing: Lift the handset and enter the number. To end the call hang up the handset.  
Handsfree: Enter the number and press , or viceversa. Press again to end the call.


### Accepting a call


Lift the handset or press .

### Redial

Lift the handset and press  to redial last dialed number.

### Putting a call on hold

To put a call on hold press .

To resume the call press  again.

### Speed dial

**Configure up to 10 speed dial memories on the** web interface.

To dial out, long press the corresponding digit key (0 to 9)


### Installation

#### Package content:

Handset, base, handset cord, Quick start guide

#### Wall mounting

- Drill 2 holes on the wall, with 131.2 or 162.2mm vertical separation
- Insert screws and anchors (not included)
- Plug phone connections
- Align phone mounting holes with screws and slide down

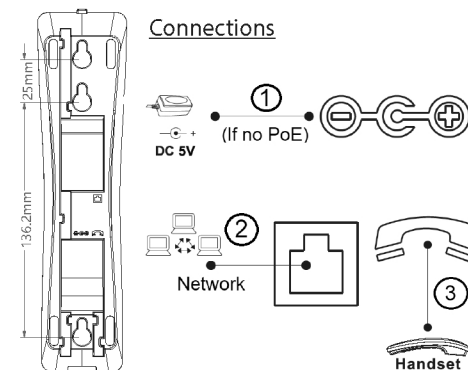

#### Connections

#### Declaration of conformity for the European Community


ATLINKS declares that Temporis IP12 telephone complies with the basic health, safety and environmental requirements in all relevant EU directives.

You can download the declaration of conformity from the following address: [www.alcatel-business.com](http://www.alcatel-business.com).

The CE logo shown on the products indicates that they are compliant with the basic requirements of all the applicable directives.



#### Environment

 This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers' are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused.

Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste. If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.

(a) - If you are a professional user, please follow your supplier's instructions.

(b) - If the appliance is rented to you or left in your care, please contact your service provider.

**Please help us protect the environment in which we live!**

#### Notice of copyright and trademarks

Copyright © 2022 ATLINKS. All rights reserved. ATLINKS reserves the right to change the technical specifications of its products without prior notice, so as to make technical improvements or respect new regulations.

Alcatel and Temporis are registered trademarks. Alcatel is a trademark of Nokia, used under license by Atlinks.

ATLINKS  
28, Boulevard Belle Rive  
92500 RUEIL-MALMAISON France  
RCS Nanterre 508 823 747